


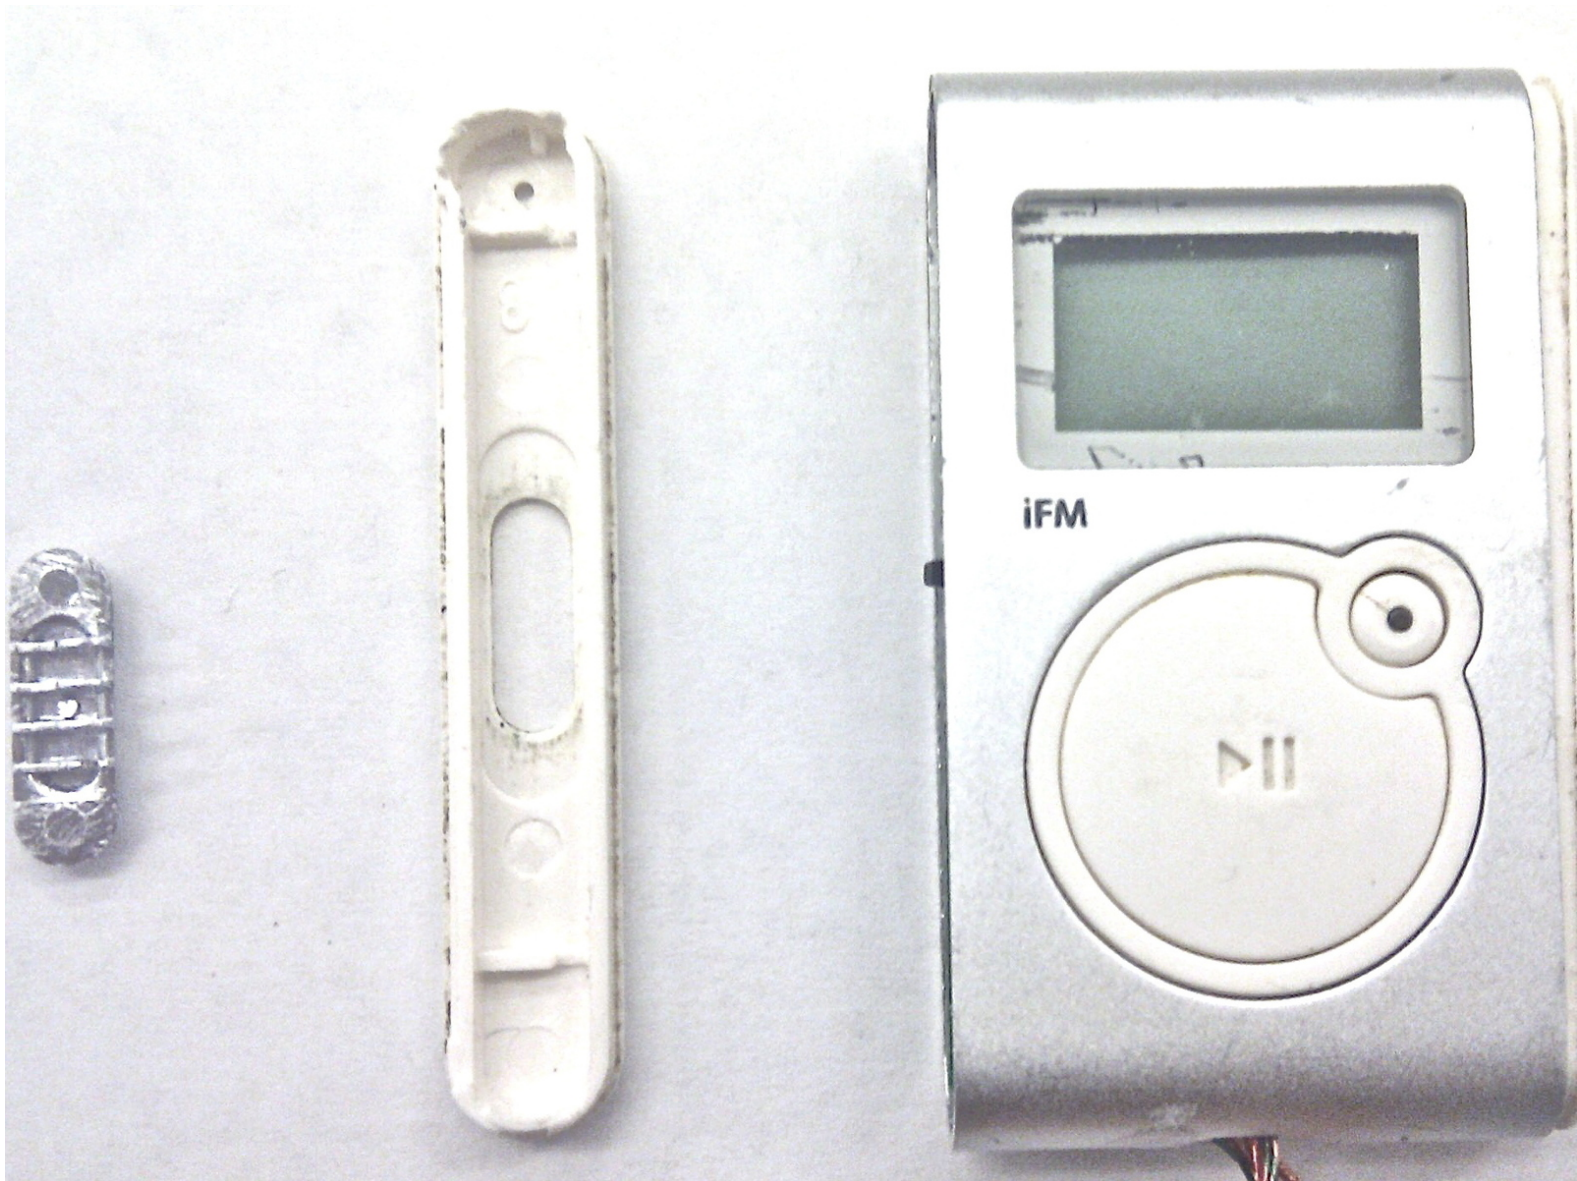

Disassembling Griffin iFM 4027 Left Side Panel (Screen Side Up)

This guide will teach the user how to detach the left side panel and the button.

Written By: Alexander



INTRODUCTION


There are no prerequisites required for this disassembly, but a spudger or similar opening tool is required to remove the panel.



TOOLS:



- [iFixit Opening Tools](#) (1)
-

Step 1 — Left Side Panel (Screen Side Up)

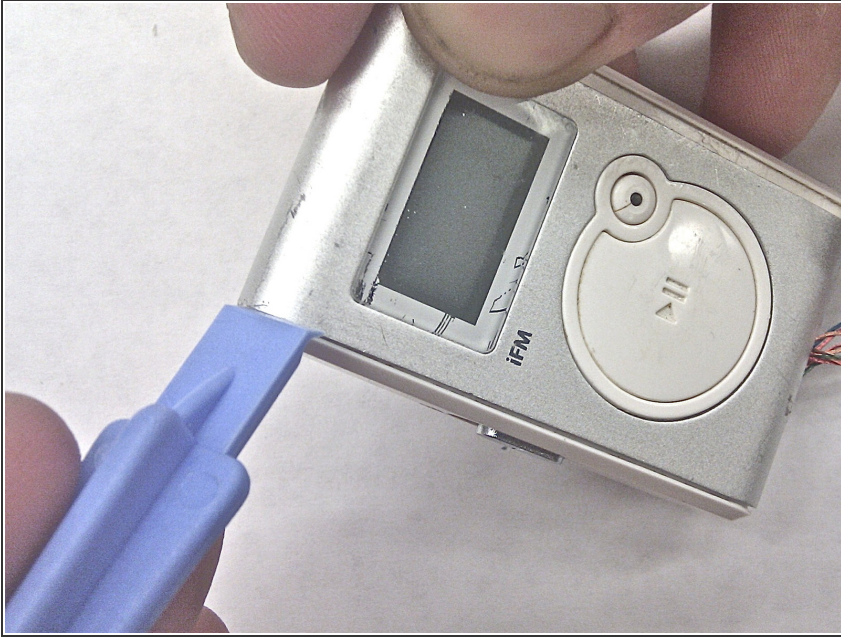

- Lodge the tip of the plastic opening tool into the top arc of the front panel. Apply a little force to cause the panel to detach.

Step 2

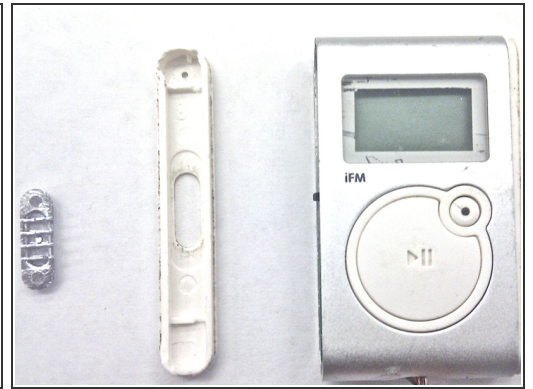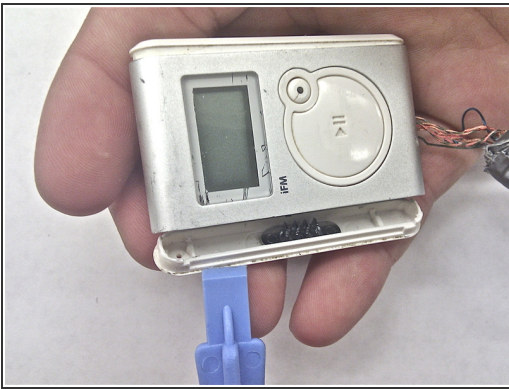

- Slide the blue opening tool along the seam applying force to continue detaching the side panel.
- Remove the button from the side panel.

After disassembly, the device components should look similar to that which is depicted in the cover image (top right of page).

This document was last generated on 2017-07-15 05:26:58 AM.